


need not be fixed in a location. For example, a base station may be placed on a moving vehicle or boat. Upgrading to Ublox-1.40 version is similar to upgrading to 1.30. For users who do not need to use the mobile baseline feature, upgrading to version 1.30 is sufficient.

Downloading U-centre UI and 1.30 Firmware

Upgrading firmware requires the use of Ublox's Windows software U-center. To download U-center, please go to the [official website](#). Then follow the prompts to install U-cent software. During the installation process, you will be prompted to install the device Driver, please ensure that only the Standard Driver For Windows is checked, as shown below.

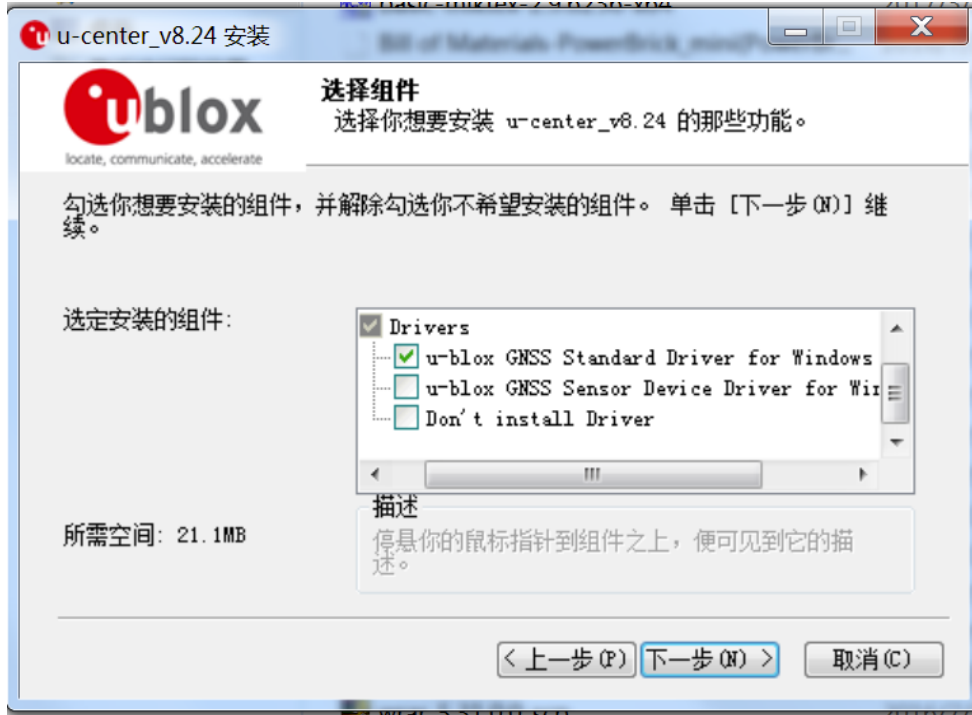

You will also need to download firmware [here](#). Click the choice: u-blox M8 Flash Firmware 3.01 HPG 1.30 - ONLY for High Precision GNSS products.

Connect your HERE+ Base and Rover to Computer

When upgrading the base station module, use the USB cable to connect the base station module to the computer USB interface, as shown in the following figure: